

# Table of Contents

---

## Chapter 1: Introduction

<b>Manual Overview</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
Who Should Read this Manual .....	1-2
Technical Assistance .....	1-2
<b>How this Manual is Organized</b> .....	<b>1-3</b>
Chapters .....	1-3
Appendices .....	1-3
<b>Concept Background</b> .....	<b>1-4</b>
<b>ScreenCreator Basics</b> .....	<b>1-4</b>
The <i>Direct</i> Touch Panel .....	1-4
Grid Lines and Dots .....	1-5
The Screens .....	1-5
<b>Installing ScreenCreator</b> .....	<b>1-6</b>

## Chapter 2: Project Tutorial

<b>Tutorial Overview</b> .....	<b>2-2</b>
Set up the Panel .....	2-2
Programming Cable .....	2-2
Start ScreenCreator .....	2-3
<b>Create a New Project</b> .....	<b>2-3</b>
Local Screens .....	2-4
Create a New Screen .....	2-4
Zoom Screen .....	2-4
Size Window to Screen .....	2-5
<b>Add a New Part</b> .....	<b>2-5</b>
Select the Part .....	2-5
Part Properties .....	2-6
Place the Part on the Screen .....	2-7
Save the New Screen .....	2-7
Add a New Screen and Screen Select parts .....	2-8
<b>Download the Project</b> .....	<b>2-10</b>
The Pushbuttons on the Panel .....	2-10
<b>The Global Screen and Local Screens</b> .....	<b>2-11</b>
Open an existing Screen .....	2-11
<b>Add a Numerical Input Display and Ten-key Pad</b> .....	<b>2-12</b>
Add a Numerical Input Display .....	2-12
Add a Ten-key Pad .....	2-14
<b>Tutorial Review</b> .....	<b>2-16</b>

---

## Chapter 3: Key Concepts

<b>Projects</b> .....	<b>3-2</b>
<b>Screens (Global and Local)</b> .....	<b>3-2</b>
<b>Screen Objects</b> .....	<b>3-2</b>
<b>Screen Parts</b> .....	<b>3-2</b>
Part Toolbar .....	3-2
Access of a Part .....	3-2
Adding Parts to a Screen .....	3-3
User Parts .....	3-3
Screen Parts Versus Library Parts .....	3-3
<b>Library Parts</b> .....	<b>3-4</b>
Like Part Templates .....	3-4
Editing Library Parts .....	3-4
Creating a New Library Part from an Existing One .....	3-5
Creating a New Library Part from Scratch .....	3-7
<b>Inside a Part</b> .....	<b>3-10</b>
Control .....	3-10
Control Texture and Color .....	3-11
Part Background and Program .....	3-11
Viewing and Editing Part Components: Browse List .....	3-12
How the Components of a Part fit together .....	3-13
How ON/OFF Colors work in a Part .....	3-14
<b>The Project Register: Screens, Registered Text and Textures</b> .....	<b>3-15</b>
Screens .....	3-15
Registered Text .....	3-16
Registered Textures .....	3-17
<b>Textures</b> .....	<b>3-18</b>
Screen (or Part) Textures Versus Library Textures .....	3-18
Adding Textures to a Screen or Part .....	3-18
<b>Bitmaps</b> .....	<b>3-19</b>
Adding Bitmaps to a Screen or Part .....	3-19
<b>Figures (Drawing Objects)</b> .....	<b>3-20</b>
Adding Figures to a Screen or Part .....	3-20
Tile Color (Fill) .....	3-20
<b>The Toolbars</b> .....	<b>3-21</b>
<b>A Quick Reference for the Toolbars</b> .....	<b>3-22</b>
Standard Toolbar .....	3-22
Drawing Toolbar .....	3-23
Part Toolbar .....	3-23
Control Toolbar .....	3-23

## Chapter 4: ScreenCreator Menus and Toolbars

<b>The Screen Menu</b> .....	<b>4-2</b>
<b>The Create Menu</b> .....	<b>4-6</b>
<b>The Edit Menu</b> .....	<b>4-11</b>
<b>The Library Menu</b> .....	<b>4-15</b>
<b>The Tools Menu</b> .....	<b>4-20</b>
<b>The Windows Menu</b> .....	<b>4-22</b>
<b>The Project Menu</b> .....	<b>4-22</b>
<b>The Help Menu</b> .....	<b>4-27</b>

## Chapter 5: Control Reference

<b>Control Definition</b> .....	<b>5-2</b>
Pushbutton/Switch .....	5-3
Selector Switch .....	5-7
Numerical Display .....	5-7
Text Display .....	5-11
Clock Display .....	5-15
Figure (Texture) Display .....	5-17
Plot .....	5-21
Bar Graph .....	5-24
Line Graph .....	5-27
Band .....	5-30
Circle .....	5-32
Free .....	5-34
Slider .....	5-36
Meter .....	5-39
Light .....	5-42
Pipe .....	5-45

## Chapter 6: Part Reference

<b>Parts</b> .....	<b>6-2</b>
Numerical Input Displays (Word) .....	6-2
Numerical Input Displays (Double Word) .....	6-4
ASCII Text Displays .....	6-6
Text Input Displays .....	6-7
Registered Text Display .....	6-9
Lights (for each Bit of a Word Address) .....	6-14
Toggle Switches .....	6-15
Selector Switches .....	6-16
Key Pads/Keyboards .....	6-18
Screen Select Parts .....	6-22
Trend Graphs .....	6-25
External Clocks and Calendars .....	6-27
The Error Display .....	6-30
Alarms (Warning Displays) .....	6-31
Special Parts .....	6-36

## Appendix A: Connecting to a PLC

<b>Connecting to PLC <i>Direct</i> PLCs</b> .....	<b>A-2</b>
Step 1: Choose RS-232C or RS-422 for panel/PLC communication .....	A-2
Step 2: Set up panel/PLC communication .....	A-2
<i>Direct</i> Touch Setup for RS-422 (panel/PLC) .....	A-2
RS-232C Setup .....	A-3
RS-422 Setup .....	A-4
Suggested Setup for PLCs with RS-422 .....	A-4
<i>Direct</i> Touch Setup for RS-232C (panel/PLC) .....	A-5
Step 3: Connect the PLC to the panel through the proper cable .....	A-5
<i>Direct</i> Touch Cables .....	A-5
<b>Connecting to Allen-Bradley PLCs</b> .....	<b>A-6</b>
RS-232C (panel/PLC) .....	A-7
Step 1: Channel 0 (RS-232C) Setup for panel/PLC .....	A-7
Step 2: Channel1 (DH 485) Setup for PC/PLC .....	A-7
Suggested Setup for A-B PLCs .....	A-8
Step 3: Connect the PLC to the panel through the DP-ABCBL-1 cable .....	A-8
Allen-Bradley SLC 5/03 or 5/04: Data Addressing .....	A-9
Allen-Bradley Micrologix (1000 or 1500): Data Addressing .....	A-9
Allen-Bradley PLCs: Communications .....	A-10
<b>Connecting to PLCs running the Modbus protocol</b> .....	<b>A-10</b>
<b>Connecting to the WinPLC</b> .....	<b>A-11</b>
<b><i>Direct</i>Touch Panel Section</b> .....	<b>A-15</b>
The Programming Cable (DP-PGMCBL) .....	A-15
<i>Direct</i> Touch Cable Pin-outs .....	A-15
<i>Direct</i> Touch Panel Specifications .....	A-16
<i>Direct</i> Touch Panel Dimensions and Installation .....	A-17

## Appendix B: ScreenCreator and *Direct*Touch panel Error Codes

<b>ScreenCreator Errors and Warnings</b> .....	<b>B-2</b>
ScreenCreator Errors (E000-E251) .....	B-2
ScreenCreator Warnings (W000-W018) .....	B-10
<b>ScreenCreator Errors in Compiling and Building Screen Data</b> .....	<b>B-12</b>
Compiling Errors (EC000-EC082) .....	B-12
Building Data Errors (EL000-EL080) .....	B-18
Building Data Warnings (WL000-WL021) .....	B-21
<b><i>Direct</i>Touch Panel Operation Errors</b> .....	<b>B-22</b>
Panel Operation Errors (1-15) .....	B-22
Main CPU Errors (1001-1063) .....	B-23
Serial Communication Errors (2000-2965) .....	B-24
Downloading/Uploading Errors (3361-3878) .....	B-25
Message Processing Errors (4110-4520) .....	B-26
Errors caused by too many messages issued (6001-6008) .....	B-26